
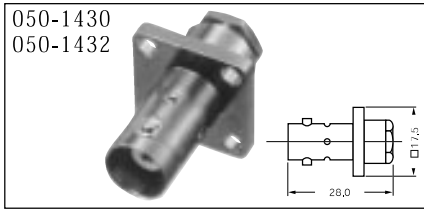


# 同軸コネクタ BNC


Lynics

## BNCコネクタ

### ジャック&パネルジャック (J & PJ)






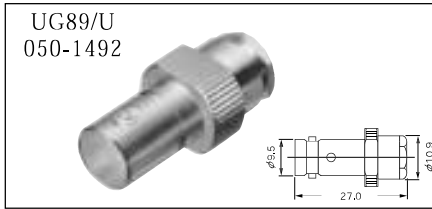


取付け穴寸法 (TOP VIEW)

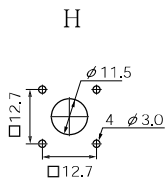


型番	適合名称	取付寸法図	適合ケーブル	備考
UG89/U	BNC-J-58		RG58/U, RG58A/U	050-1490同等
050-1492	BNC-J-3		3D-2V	
050-1430	BNC-PJ-58	H	RG58/U, RG58A/U	UG291/U 同等
050-1432	BNC-PJ-3	H	3D-2V	

### 基板取付型レセプタクル (R)

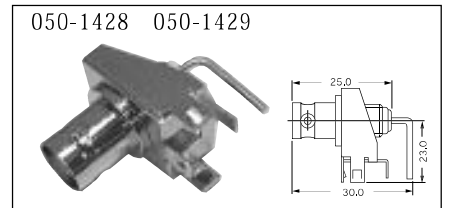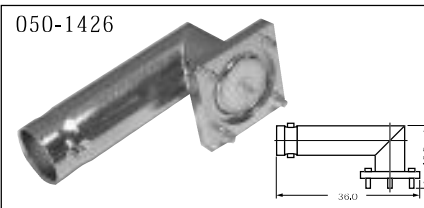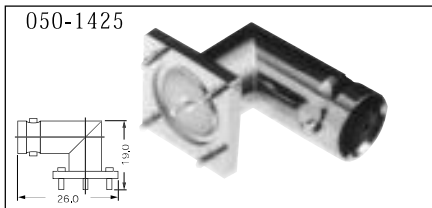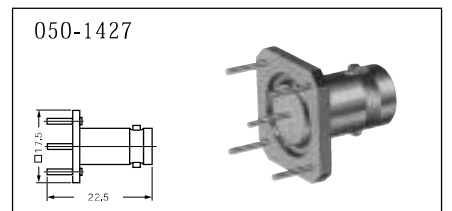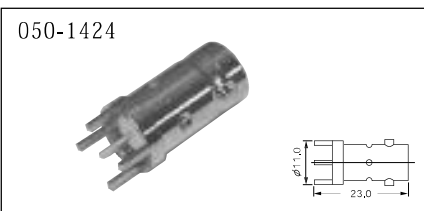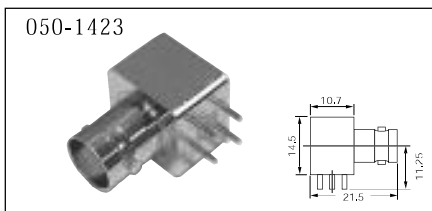

取付け穴寸法

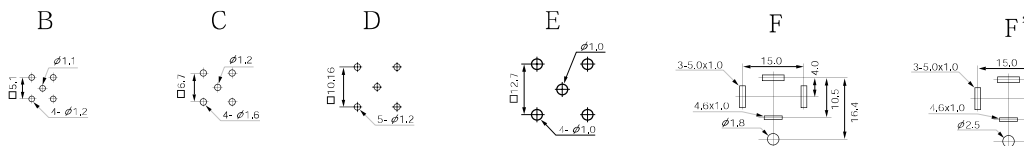

型番	適合名称	取付寸法図	備考
050-1423	BNC-LR	B	
050-1424	BNC-SR	C	
050-1425	BNC-LR	D	
050-1426	BNC-LR	D	
050-1427	BNC-SR	E	
050-1428	BNC-R	F	真鍮丸ピン
050-1429	BNC-R	F'	タフイストフォークピン